 


PLT-LAT-MA parts list

1 of 4

26 x 2 pcs



27 x 2 pcs



 
28 x 2 pcs



29 x 2 pcs




33 x 2 pcs




34 x 4 pcs



 
37 x 1 pc



38 x 1 pc

 


44 x 2 pcs

 

50 x 2 pcs



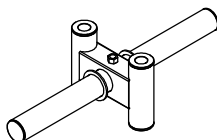51 x 1 pc










62 x 2 pcs



manual







PLT-LAT-MA parts list

 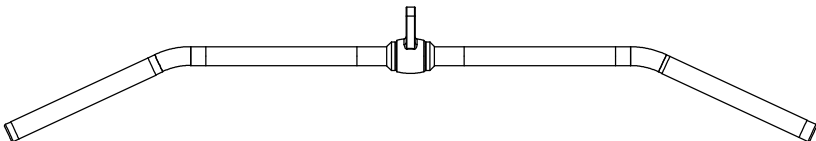  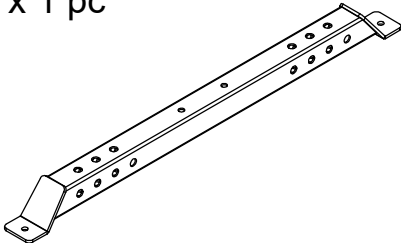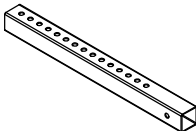 2 of 4





③① x 3 pcs 	③② x 2 pcs ∅ 80 pulleys 	③③ x 7 pcs ∅ 114 pulleys 	
③⑥ x 1 pc 		③⑤ x 1 pc 	
④⑧ x 1 pc 	④⑨ x 1 pc 	④① x 1 pc 	
		⑤⑤ x 1 pc 	⑤⑨ x 1 pc 
		⑥① x 2 pcs 	hardware package 1#~20#

PLT-LAT-MA parts list

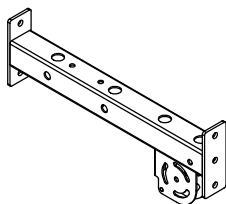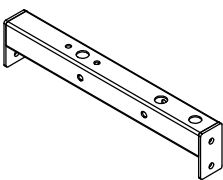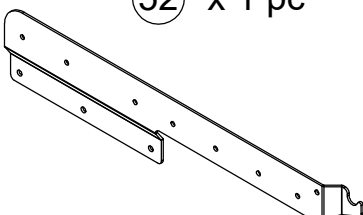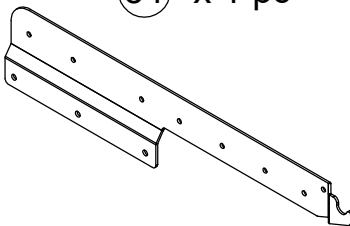  3 fo 4

④② x 1 pc 	④③ x 1 pc 	⑤② x 1 pc 	⑤④ x 1 pc 	
⑤⑦ x 1 pc 	⑤⑧ x 1 pc 	⑥① x 1 pc 	⑤⑥ x 1 pc 	⑥③ x 1 pc 

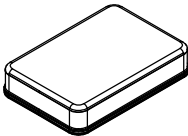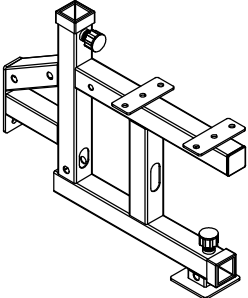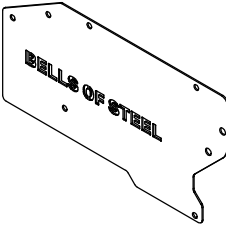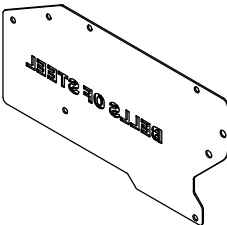4 fo 4

③⑨ x 1 pc 	④① x 2 pcs 	④⑤ x 1 pc 
④⑥ x 1 pc 	④⑦ x 1 pc 	⑤③ x 1 pc 